Installation instructions / Pillar IKI 12-15 kW 1-phase Wave control unit + S2-30 power booster

Affixing the sensor to the ceiling: distance from heater frame 100–300 mm

The temperature sensor should be installed no less than 1000 mm from an undirected air vent income, or less than 500 mm from a directed air vent.



